

DUTY 11 - DISHWASHER AND BAR DISHWASHER

COVID DUTY:

Twice Daily (Morning and Afternoon):

- wipe high touch areas using bleach mix – dishwasher and bar dishwasher controls and handles
- record completion in the high touch point disinfection log in dining room (AM and PM)

On leaving:

- wipe down your bed underlay(s) with an IPA WIPE. *Do not use bleach.*

Daily - Kitchen Dishwasher

Drain:

Remove overflow pipe (central visible tube) from filter
Close door, select cycle “dr” and press start.
Machine will run drain cycle and turn off automatically

Clean:

Remove and carefully clean all the filters and large rectangular drainage plates
Remove large circular plastic filter by rotate and lift then clean
Scrub base and sides and rinse and repeat drain cycle
Check that the rinse and wash arms and jets rotate and are free from foreign matter.
Wipe interior and exterior of machine.
Replace filters and overflow pipe.
Leave door open if possible to allow machine to air.
Check level of detergent and rinse aid (containers in cupboard under sink) and top up if low. (supplies in laundry cupboard) wear rubber gloves if top up is required as the liquids can be caustic.

Fill:

Press on/off button, machine will run self-check then fill and heat water – when ready for use the 3 lights on the left of display will turn green.

Daily - Bar Glasswasher

Drain:

Remove overflow pipe (central visible tube) from filter
Close door, select cycle “dr” and press start.
Machine will run drain cycle and turn off automatically

Clean:

Remove and carefully clean all the filters.
Check that the rinse and wash arms and jets rotate and are free from foreign matter.
Wipe interior and exterior of machine.
Replace filters and overflow pipe.
Leave door open if possible to allow machine to air.
Check level of detergent and rinse aid (containers in cupboard under sink) and top up if low. (supplies in laundry cupboard) wear rubber gloves if top up is required as the liquids can be caustic.

Fill:

Press on/off button, machine will run self-check then fill and heat water – when ready for use the 3 lights on the left of display will turn green.